

## User manual

# XM-2D6904 XM-2D6907

Thank you for purchasing one of our XOMAX products! We appreciate your confidence. Enjoy your brand new multimedia unit!



Please read the following manual carefully before you install and use the unit. Please save this manual in case you will need to clarify further possible questions regarding installation and usage of our product.

We are constantly trying to keep our online-library of user's manuals for our products up-to-date. In case you miss some information or if something should be unclear, please visit our homepage [www.xomax.de/download](http://www.xomax.de/download) for a current version of user's manual or contact our customer service.

**Please note:** Any alternations and changes of technical data or/and design due to technical update of some models need no advertisement.



We appreciate our environment, so to keep it safe and clean, we do not print our manuals on paper but provide our products with manuals in digital version created in \*.pdf format.

You can find and download them anytime on our homepage [www.xomax.de](http://www.xomax.de), view them on your mobile devices and print them for yourself if needed.

## Manual's version 2.0

Last update 26.04.2019

## **IMPORTANT NOTICE & PRECAUTIONS**

Thank you for using our company multi-media player! To operate the unit correctly, please read the operation manual carefully before using. Keep this operation manual for future reference.


The unit is designed only for DC 12V negative ground operation system. Make sure your vehicle is connected to DC 12V negative ground operation system. Be sure to connect the speaker(-) leads to the speaker(-) terminal. Never connect the left and right channel speaker wires together or to the vehicle body.

The normal temperature for operation is between  $-0^{\circ}$  and  $+40^{\circ}$  degree Celsius. Do not work in extreme high or low temperature and lock vents or radiator panels of the unit, blocking them will cause heat to build up inside the unit and may cause damage or fire.

This unit can play the following discs (12 cm) and media files: DVD $\pm$ R/RW / RMVB / MPEG 4 / AVI / SVCD / VCD / MP3 / WMA / CD-R/RW / JPEG.

BLUETOOTH

## **INSTALLATION**

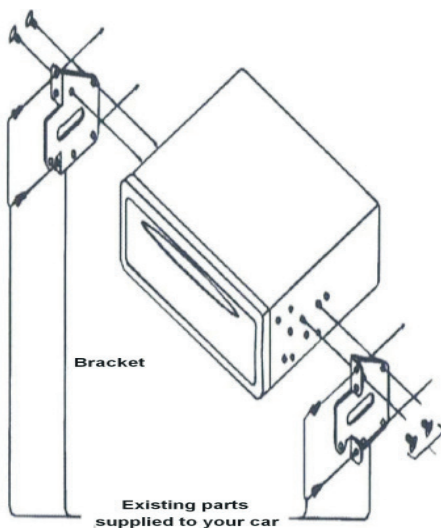

Notes:

- Installation varies on type of cars and supplied parts
- Store small articles in places not accessible to children
- Install only with the supplied screws
- Installation of unit by professional technician is strongly recommended

Remarks:

Mounting brackets and screws are the parts that supplied in your car and not provided in this unit.

## Handling by stop only

To avoid any accidents please don't handle the unit while you driving. Please stop and park the vehicle at safety place and handle the unit casually.

## Installation

Please read the following manual carefully before you install the unit. We recommend you to let the technician install the unit in your vehicle.

## Regular loudness

Please set the loudness of the unit to the appropriate level so you were still able to hear exterior noises especially traffic warning signals. Furthermore the higher loudness level can damage your hearing organs.

## Repair of the unit

Do not open the unit. Do not try to repair the unit by yourself due to any emerging technical problems. While opening the unit by yourself exists the danger to be electrocuted.

Do not use the unit any further since you detect any kind of technical problems.

Leave all the repair operations to professional technicians.

 Due to flawed warranty seal the warranty becomes invalid.

## Power supply

Use the unit connected only to 12 Volt on-board power supply. The minus (-) should be connected with the ground (GND) (negative).

Due to the wrong configuration exists the danger of fire. In case of doubt please consult with professional technicians.

## Replacement of fuses

While replacing the fuse please make sure that the new fuse has the same properties as the old one, especially the amperage.

## Overheating

Do not occlude the vent holes to avoid the heat generation and accumulation in the unit. Otherwise exists the danger of fire.

## Regular temperature

Please make sure that the temperature inside of the vehicle amounts to not more than +40 C.

If it's too cold or too hot inside of the vehicle, do not turn the unit on until the inside temperature of the cabin descends.

## Cleaning of the unit

Please keep the unit clean and remove the dust from it regularly. Please use for that a soft and dry cleaning rag.

Major soilings can be removed carefully with the wet cleaning rag. Do not use any chemical or alcohol-containing detergents to avoid the damage of the unit's varnish.

## Usage of the touchscreen

Do not press the touchscreen too hard – it may lead to image distortions, unit malfunctions and touchscreen damages.

Do not use any sharp articles to use the touchscreen. Please handle the touchscreen with your finger or with the appropriate stylus.

## Moisture

To avoid the danger of fire or the electric shock do not put the unit in to the moist environment (e.g. adverse weather conditions, inappropriate wet cleaning etc.)


## The risk of injuries

Do not open the cabinet or modify the unit. The active laser components used with this product comply with the provisions of Laser Class 1.

## Handling the CDs and DVDs

### Remove transport securing screws (if available)

Before using the optical drive, be sure to remove the two transport locking screws marked with colored stripes (top of the radio).

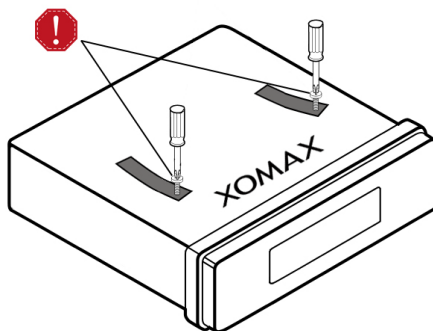

**CLASS 1  
LASER PRODUCT**

## **INSTALLATION**

 We recommend you to let a professional technician install the unit in your vehicle.

### **WARNING!**

**Please read these advices carefully before installation procedure.**

**The damages caused by an inappropriate installation are not covered by warranty.**

**To avoid the risk of losing the warranty please let a specialist accomplish the installation of the unit.**

» To avoid a short circuit please disconnect the vehicle battery before the installation. To do it properly please read the manual of the vehicle.

» Please be aware that this unit has an 2DIN standart size. Make sure that your vehicle is equipped with an installation cell of required size.

» As may be the case you will need a suitable faceplate, adapter or other accessories. These could be provided from your local specialist supplier.

» The connection cables may not be cutted or short-circuited. Otherwise the warranty becomes invalid.

» Before the installation please make sure that the vehicle has the 12 Volt on-board power supply.

» The minus (-) should be connected with the ground (GND) (negative).

» Please tag the polarity of the available speakers before you disconnect the vehicle battery.

» A proper grounding of the unit's housing requires a clean ground connection. Thus the grounding area should be rust-, stain- and dust-free.

» Please ground the cable separately from other heavy current devices such as an amplifier etc.

» Please ensure that the coloured cables are connected according to the wiring diagram. The wrong wiring may lead to malfunctions or even damages of the electric elements of the vehicle.

» Please note that the connection cables of this unit and of the other devices may have the same purpose but the different colour. For this reason while connecting this unit with the other devices please ensure that both of the cables in each case have the same purpose. To configure everything correctly please refer to the manuals of the both devices.

» Please ensure that the negative speaker cable is in each case plugged into the negative speaker socket of the ISO interface. Do not ever connect the negative speaker cables with the vehicle body.

» This unit is designed and construed for connection with 4 speakers. Do not combine this unit with devices that are designed and construed for connection with 2 speakers.

» The speakers should feature the impedance of 4-8 Ohm and a sufficient wattage.

» Please ensure that the speakers you are connecting with the unit are intact. Damaged speakers can impair the unit.

» To avoid a short circuit please isolate all cable junctions and endings of the unused cables with the electrical tape.

» All the cables should be layed and fixated tidy and properly. The cables should not contact any movable or hot objects.


» If the vehicle doesn't have an "ACC" ignition position, please connect the red cable with the ignition switch. Otherwise the unit does not turn off automatically, causing the discharging of the vehicle battery.

» To avoid a rogue and hazardous short circuit do not lay the yellow cable through the engine bay in order to connect it with the vehicle battery.


» Do not ever connect speaker cables among one another. In case you do not want to connect all the 4 speakers with the unit please isolate the endings of unused cables with the electrical tape to prevent a short circuit.

» Do not ever connect the negative speaker cables with the vehicle body.

» To ensure a flawless performance of the unit the intergration angle should amount to +/- 30°.

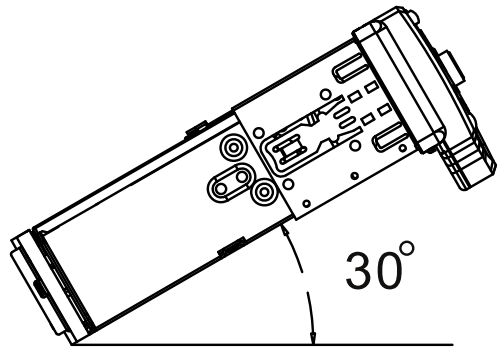

# MAIN UNIT OPERATION

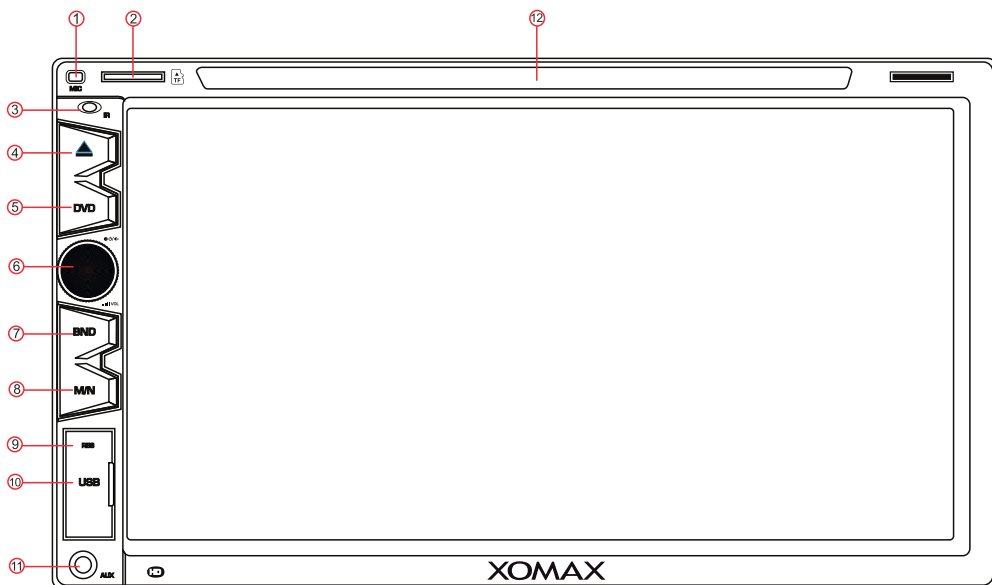

## Symbol / Function      Operation & Controls

1. MIC  
For voice reception under **BLUETOOTH** operation.
2. MICRO SD / SD / MINI SD / ■ /  
Insert micro SD card to this port for digital files playback.
3. IR  
Remote control sensor (for signal reception from remote handset).
4. ▲ / EJECT  
Press to eject disc from the disc slot (when a disc has been inserted).  
▶|| At disc / USB / SD card input & **BLUETOOTH** mode, press to start, pause or resume playback.
5. DVD  
Press to shift the current operation mode to disc operation mode.
6. ■■■ VOL- / VOL+ / VOL-  
For rotary control version, rotate to adjust sound output level.  
■ / MUTE For keys control version, press repeatedly to adjust sound output level.  
EQ During unit operation, press to turn on or off of sound mute control.  
LOUD Press repeatedly to select the preset equalization mode.  
⏻ / POWER Press to turn on or off of loudness control.  
When the unit is turned off, press to turn on the unit.  
When the unit is turned on, press & hold shortly to turn off the unit.
7. BND / BAND  
At radio mode, press to select radio band (AM/FM) for broadcasting. (Note: When the unit is under other operation mode, press to shift the current operation mode to radio operation mode)
8. MODE / MENU / SRC / M/N  
During unit operation, press to shift screen to MAIN MENU / GPS MAIN MENU.
9. RES / RST  
Press with a pointed object (such as a ball point) to reset the unit to its initial setting by the factory (default stage).

| <u>Symbol / Function</u> | <u>Operation &amp; Controls</u> |
|--------------------------|---------------------------------|
|--------------------------|---------------------------------|


- |               |                                                                                                                                                                                                                                                                                                         |
|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 10. USB       | Insert USB device to this slot for digital files playback. (Note: The USB slot is intended for data transfer only)<br>Remark: When USB devices had been inserted both in the front & back USB slots, playback will only be made from the front USB device (available for unit with back side USB slot). |
| 11. AUX       | Insert an external device to this jack in order to have sound output of that external device through the unit.                                                                                                                                                                                          |
| 12. DISC SLOT | Insert or remove disc from this disc slot.                                                                                                                                                                                                                                                              |

|            |                                                                                                                                                                                                         |
|------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TFT SCREEN | It shows the status of operation on the unit. This screen is also a touch display – soft touch the screen for different operations of unit (refer to other parts of this manual for operation details). |
|------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

Note

The above mentioned operations are for various series of the same type and may not be available in the unit. Printing and symbols on the above may vary from the exact main unit. Referred to the main unit for exact functions and features that applied. User is highly recommended to use the touch screen control to operate. Most of the controls cannot be operated by the main unit.

# REMOTE HANDSET – GENERAL OPERATION

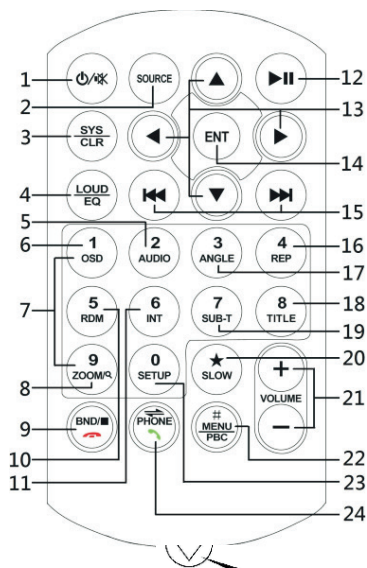

Remove this tab before using the remote handset

## BATTERY REPLACEMENT

Refer to the back of remote handset for details on how to replace the battery.

| NO. | SYMBOL | OPERATION & CONTROL MODES                                                                                                                                                                                                                                                                                   |
|-----|--------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1.  |        | When the unit is turn off, press to turn on the unit.<br>When the unit is turn on, press & hold shortly to turn off the unit.<br>During unit operation, press to turn on or off of sound mute control                                                                                                       |
| 2.  |        | Press repeatedly to select the desired mode for operation.                                                                                                                                                                                                                                                  |
| 3.  |        | At <b>BLUETOOTH</b> mode, press to erase the digit input by error.                                                                                                                                                                                                                                          |
| 4.  |        | Press repeatedly to select the desired preset equalization mode.                                                                                                                                                                                                                                            |
| 5.  |        | Press & hold shortly to turn on or off of loudness control.                                                                                                                                                                                                                                                 |
| 6.  |        | At video and music playback mode, each time press & hold shortly to select different audio output channels. (Note: Available on input device or media files recorded with different output channels and this selection is not available under <b>BLUETOOTH</b> mode)                                        |
| 7.  |        | At media playback mode, press to display the contents of the playback details on screen. (Note: Not available at music playback mode)                                                                                                                                                                       |
| 8.  |        | <u>Radio Mode</u><br>Press any one of the number key 1-6 to select a station that had been stored in the preset memory number key 1-6 for broadcasting.<br>Press & hold shortly the number key 1-6 to store the current broadcasting frequency or station into the respective preset memory key number 1-6. |
| 9.  |        | <u>Disc / USB / SD / iPod Input Mode</u><br>Press directly to input the number of track for playback.                                                                                                                                                                                                       |
| 10. |        | <u>BLUETOOTH Mode</u><br>Press directly to input the phone number for dial out.                                                                                                                                                                                                                             |
| 11. |        | <u>TV Mode</u><br>Press directly to input the number of channel that had been memorized for broadcasting.                                                                                                                                                                                                   |

8. ZOOM  Disc / USB / SD Input Mode  
At video & photo playback, each time press & hold shortly to select various zoom in and zoom out of screen for viewing.  
Radio Mode  
Press to start scanning all the preset stations on memory and stop for a few seconds for broadcasting.  
Press & hold shortly to start searching the frequency and storing the strongest signal stations into the preset memory stations (total 20 preset stations on each radio band). After storing the stations, the unit starts scanning all the preset stations on memory and stop for a few seconds for broadcasting.  
TV Mode  
Press to start scanning all the preset channels on memory and stop for a few seconds for broadcasting.
9. BND  Radio Mode  
Press repeatedly to select the desired radio band for broadcasting.  
Disc / USB / SD Input Mode  
At video playback mode under disc input, press to stop playback.  
At music / photo playback mode under disc input and playback mode under USB / SD input, press to stop playback temporary and will resume normal playback after a few seconds.  
 BLUETOOTH Mode  
Press to hang up or refuse an incoming call.
10. RDM At disc / USB / SD input playback mode, press & hold shortly to turn on or off of random playback of the input device
11. INT At music playback mode, press & hold shortly to turn on or off of intro playback of the input device. (Note: Not available at BLUETOOTH mode)
12.  At disc / USB / SD / input & BLUETOOTH mode, press to pause, resume or start playback.
13.  DVD Mode  
At DVD menu/title display mode, press to select the desired setting/setup and press ENT to confirm/enter.  
Folder / Playlist Mode  
During folder/playlist display at media playback mode, press to shift page up or down on playlist.  
Photo Playback Mode  
Press to rotate photo position or show up-down, left-right mirror image.
14. ENT DVD Mode  
At DVD menu/title display mode, press  to select the desired setting/setup and press ENT to confirm/enter.
15.  Radio Mode  
Press repeatedly to fine tune radio frequency upward or downward.  
Press & hold shortly to tune radio frequency to the upward or downward station for broadcasting.  
Disc / USB / SD Input Mode (Playback Mode)  
Press repeatedly to shift track upward or downward for playback.  
Press & hold shortly to activate fast forward or fast rewind mode. At this mode, press repeatedly to select various speeds of fast forward or fast rewind. (Note: Not available for operate at photo playback mode)

### TV Mode

Press to shift TV channel upward or downward for broadcasting.

Press & hold shortly to shift to the upward or downward channel for broadcasting.

### BLUETOOTH Mode

Press to shift track upward or downward for playback.

16. REP At playback mode under disc / USB / SD input, each time press & hold shortly to activate various repeat playback setting.
17. ANGLE At video playback mode, each time press & hold shortly to view angle changes in sequential order (available on media files recorded with this features).

18. TITLE Radio Mode

Press to select stereo (ST) or mono mode at FM radio band. (Note: At stereo mode and when stereo signal received, stereo indicator appeared on screen whereas this is not indication for mono mode and mode signal received)

### DVD Mode

Press & hold shortly to display on screen the menu of the entire disc and resume playback after a while.

19. SUB-T Video Playback Mode

Each time press & hold shortly to select different sub-titles that recorded in the input device or media files. (Note: Available on input device or media files recorded with sub-titles)

### Radio Mode

At radio band, press to select local setting for reception of strong signal stations and distant setting for reception of weak signal stations. (Note: LOC appears on screen on local setting whereas no indication for distant setting)

20. SLOW At video playback mode, each time press & hold shortly to select different speeds on slow motion playback.

21. VOL + / VOL - Press repeatedly or press & hold to adjust sound output level.

22. MENU / PBC DVD Mode

Press & hold shortly to display on screen the menu of the entire disc & resume playback after a while.

### VCD Mode

Press & hold shortly to turn on or off of PBC playback. At PBC on mode, press & hold shortly will start the sequence playback at the beginning.

23. SETUP During unit operation, press & hold shortly to activate setup menu on screen for various system setup. Press & hold shortly again to return to previous operation mode. (Note: System setup cannot be operated by remote handset. System setup can only be operated by touch screen – refer to ON SCREEN OPERATION for details)

24.  BLUETOOTH Mode

Press to pick up an incoming call; dial out after input a phone number; redial last dial out number.



/ PHONE

Press to shift conversation between main unit and mobile phone.

Remarks: Depends on the input devices & playback media files, operation may be varied or not available for operation.

## ON SCREEN – MAIN MENU OPERATION

### MAIN MENU




Touch the icon on the desired mode on screen and the unit will then enter into the mode that you selected for operation. Hold & slide on the lower portion of screen (input icons) to shift to other **MAIN MENU** that shows the hidden input or operation icons.

1. Touch to start radio operation.
2. Touch to start disc input operation (when a disc inserted).
3. Touch to start USB input operation (when an USB device inserted).
4. Touch to start SD card input operation (when a micro SD card inserted).
5. Touch to start auxiliary input operation (when an auxiliary device inserted).
6. Touch to start **BLUETOOTH** operation (when connected to a mobile phone).
7. Touch to start various setting of the unit.
8. Touch to start Front Camera function operation
9. Touch to start radio function operation
10. Touch to start main Menu operation
11. Touch to DVD function operation
12. Touch to BT function operation


## ON SCREEN – AUDIO & VISUAL SETTING

 During unit operation and when this icon appeared on screen, touch to activate audio & visual setting for various audio & visual setup.

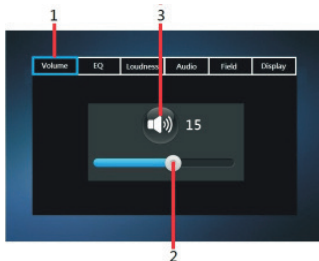

### Volume Control

1. Touch to shift to Volume Control Menu.
2. Hold & slide to adjust sound output level.
3. Touch to turn on or off of sound mute control.

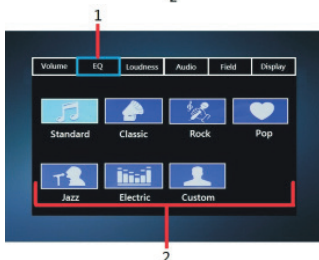


### Preset Equalization Control

1. Touch to shift to Preset Equalization Control.
2. Touch to select the desired preset equalization mode. At Custom mode, it is set by the user (Refer to AUDIO SETUP under ON-SCREEN – SETUP OPERATION).




### Loudness Control

1. Touch to shift to Loudness Control.
2. Touch to turn on or off of loudness.

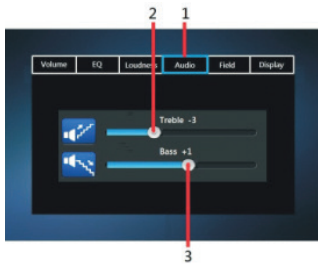


### Audio Control

1. Touch to shift to Audio Control.
2. Hold & slide to adjust output level on treble.
3. Hold & slide to adjust output level on bass.

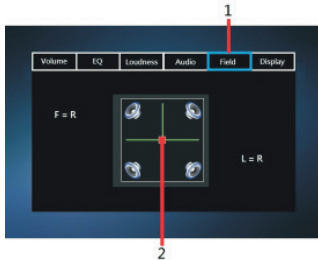

### Field Control

1. Touch to shift to Field Control.
2. Hold & slide to set for the output level on left / right / front / rear speaker.

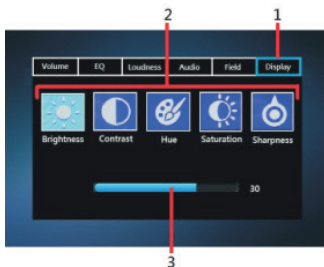


### Visual Control

1. Touch to shift to Display Control.
2. Touch to select the desired setting mode on brightness, contrast, hue, saturation and sharpness.
3. At the desired setting mode, hold & slide to adjust the level.


## ON SCREEN – SETUP OPERATION

At **MAIN MENU**, touch 'SETUP' icon on screen to shift screen to **SETUP MENU** for various system setup of unit.

### SYSTEM SETUP MENU

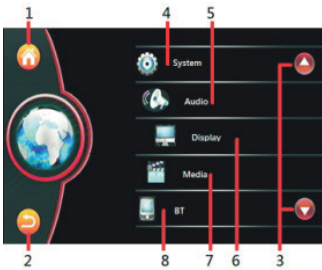


### SYSTEM SETUP MENU

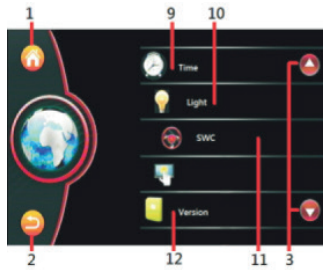


1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. Touch to shift page up or down.
4. Touch to shift to **SYSTEM SETUP MENU** for various system setting (Refer to SYSTEM SETUP).
5. Touch to shift to **AUDIO SETUP MENU** for various audio setting (Refer to AUDIO SETUP).
6. Touch to shift to **VISUAL SETUP MENU** for various visual setting (Refer to VISUAL SETUP).
7. Touch to shift to **MEDIA SETUP MENU** for various media setting (Refer to MEDIA SETUP).
8. Touch to shift to **BLUETOOTH SETUP MENU** for various Bluetooth setting (Refer to BLUETOOTH SETUP).
9. Touch to shift to **CALENDAR SETUP MENU** for calendar & clock setting (Refer to CALENDAR & CLOCK SETUP).
10. Touch to shift to **LIGHT SETUP MENU** for various illumination backlight setting (Refer to ILLUMINATION BACKLIGHT SETUP).
11. Touch to shift to **SWC SETUP MENU** for steering wheel control setting (Refer to STEERING WHEEL CONTROL SETUP).
12. Touch to shift to **VERSION MENU** to show details of the unit (Refer to VERSION OF UNIT).

## AUDIO SETUP

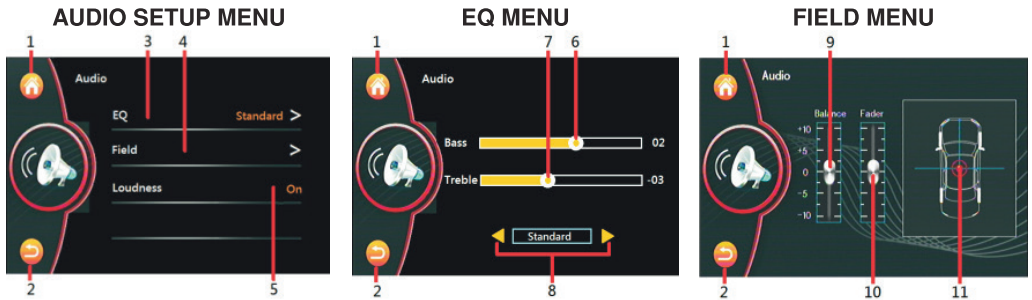



1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. Touch to activate **EQ MENU** for equalization setting.
4. Touch to activate **FIELD MENU** for sound output setting on balance & fader.
5. Touch to turn on or off of loudness control.
6. Hold & slide to set for output level on bass.
7. Hold & slide to set for output level on treble.
8. Touch repeatedly to select the desired preset equalization mode.
9. Hold & slide to adjust the output level between left & right speaker.
10. Hold & slide to adjust the output level between front & rear speaker.
11. Hold & slide to set for the desired output level between left & right speaker as well as front & rear speaker.

## VISUAL SETUP

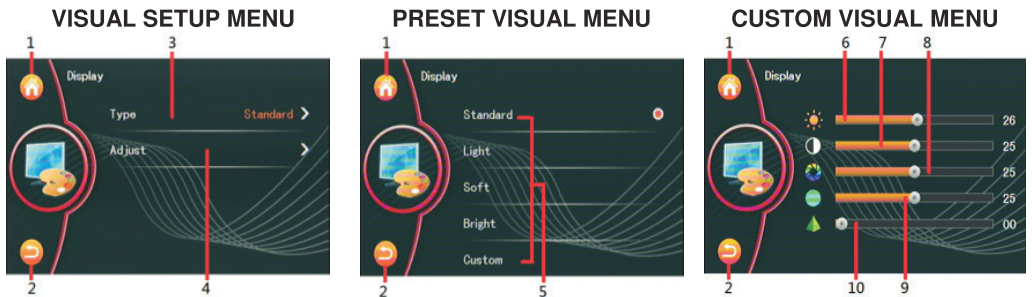



1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. Touch to activate **PRESET VISUAL MENU** for preset visual setting.
4. Touch to activate **CUSTOM VISUAL MENU** for visual setting.
5. Touch to select the desired preset visual mode of screen.  
(Note: At "Custom" mode, visual setting on brightness, contrast, hue, saturation & sharpness are made by user under **CUSTOM VISUAL MENU**)
6. Hold & slide to adjust brightness of screen.
7. Hold & slide to adjust contrast of screen.
8. Hold & slide to adjust hue of screen.
9. Hold & slide to adjust saturation of screen.
10. Hold & slide to adjust sharpness of screen.

## MEDIA SETUP

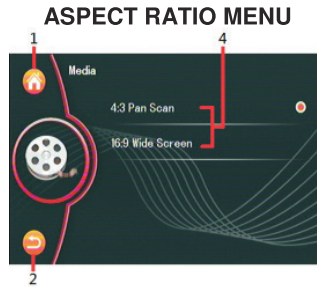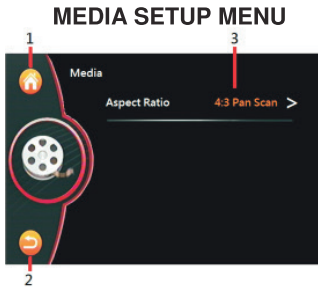


1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. Touch to activate **ASPECT RATIO MENU** to select aspect ratio of screen for viewing.
4. Touch to select the desired aspect ratio of screen for viewing.


## BLUETOOTH SETUP

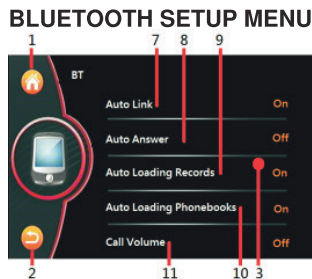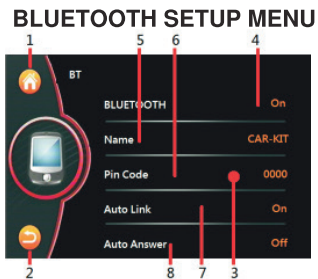

### KEYBOARD MENU

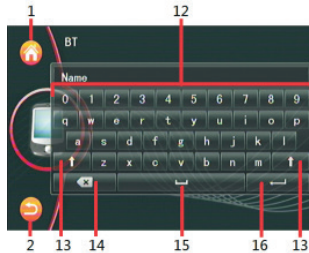

### PIN CODE MENU

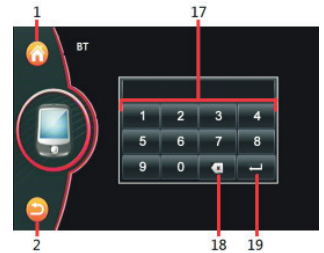


1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. Hold & slide to show the hidden Bluetooth setup modes.
4. Touch to turn on or off of Bluetooth operation mode.
5. Touch to activate **KEYBOARD MENU** for renaming the device (default name "CAR-KIT").
6. Touch to activate **PIN CODE MENU** for changing the pin code of the device.  
(Note: Default pin code "0000" or "8888").
7. Touch to turn on or off of auto linking between the car unit and mobile phone when the car unit turned on again after power off.
8. Touch to turn on or off of auto answer when receiving incoming call.


9. Touch to turn on or off of automatic loading record of incoming calls / dial out numbers / missing calls of the mobile phone to the car unit.  
(Note: Loading of record will start automatically when the unit linked up with the mobile phone & shift to **BT RECORD MENU** at the first time – refer to ON SCREEN – BLUETOOTH OPERATION for details)
10. Touch to turn on or off of automatic loading phone book of the mobile phone to the car unit.  
(Note: Loading of phone book will start automatically when the unit linked up with the mobile phone & shift to **BT PHONE BOOK MENU** at the first time – refer to ON SCREEN – BLUETOOTH OPERATION for details)
11. Touch to turn on or off of the default volume level during Bluetooth conversation.  
ON mode: volume level at Bluetooth conversation is shifted to the default volume level  
OFF mode: volume level at Bluetooth conversation is the same level at current volume level  
Note: Volume level can be adjusted at any time during Bluetooth conversation
12. Touch to input the new name of the device.
13. Touch to shift between capital letter & small letter.
14. Touch to erase the digit / letter input by error.
15. Touch for spacing.
16. Touch to confirm the input.
17. Touch to input the new pin code of the device.
18. Touch to erase the digit input by error.
19. Touch to confirm the input.

## **CALENDAR & CLOCK SETUP**


### **CALENDAR SETUP MENU**

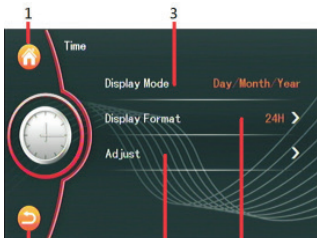

### **CALENDAR FORMAT MENU**

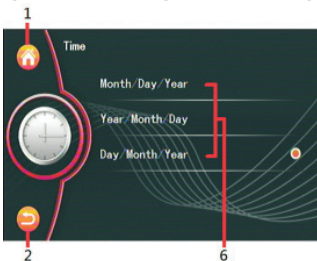

### **CLOCK FORMAT MENU**

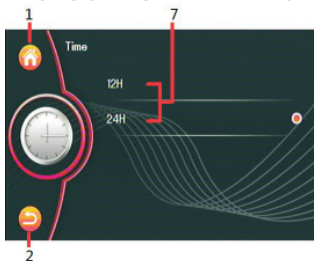

### **SETTING MENU**




1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. Touch to activate **CALENDAR FORMAT MENU** for date / month / year format setting.
4. Touch to activate **CLOCK FORMAT MENU** for 12H / 24H display format setting.


5. Touch to activate **SETTING MENU** for calendar & clock setting.
6. Touch to select calendar display format.
7. Touch to select clock display format.
8. Touch repeatedly to set for calendar & clock.

## ILLUMINATION BACKLIGHT SETUP


### LIGHT (AUTO) SETUP MENU

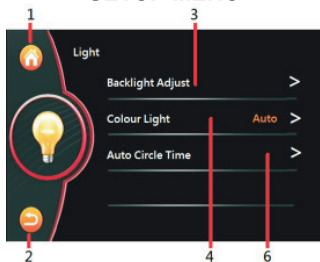


### LIGHT (MANUAL) SETUP MENU

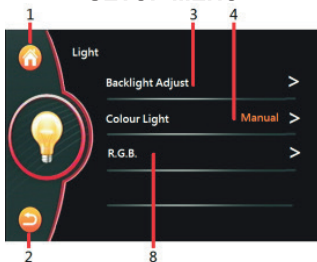


### LIGHT (PRIMARY) SETUP MENU

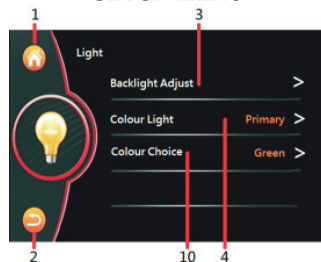


### MODE MENU

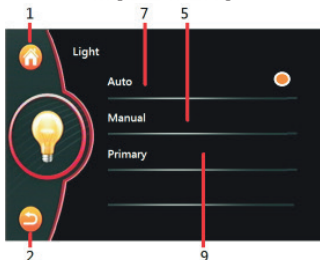

### ADJUST MENU

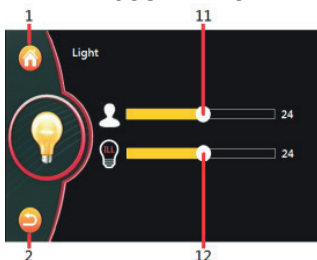

### R.G.B. MENU

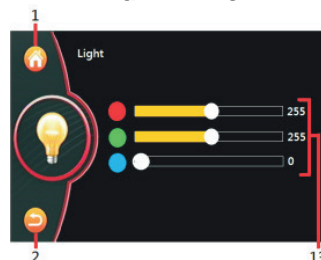


1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. Touch to activate **ADJUST MENU** to adjust backlight illumination.
4. Touch to activate **MODE MENU** to select illumination mode (auto / manual / primary).
5. Touch to select **MANUAL MODE** for R.G.B. colour setting.
6. When **AUTO MODE** selected, touch to activate **AUTO CYCLE TIME INTERFACE** to select the time for automatic backlight change.
7. Touch to select **AUTO MODE** for automatic backlight change (cycle change).
8. When **MANUAL MODE** selected, touch to activate **R.G.B. MENU** for R/G/B adjustment.
9. Touch to select **PRIMARY MODE** to select a single colour illumination.
10. When **PRIMARY MODE** selected, touch to activate **COLOUR INTERFACE** to select a single colour for illumination.
11. Hold & slide to set brightness of screen when brightness of screen is set at **USER MODE** (refer to ON SCREEN – MAIN MENU OPERATION): 
12. Hold & slide to set brightness of screen when brightness of screen is set at **USER SETTING MODE** under headlamp detection at ON mode (refer to ON SCREEN – MAIN MENU OPERATION): 

13. At **R.G.B. MENU**, hold & slide to adjust the desired R / G / B colour.

Note: Backlight illumination is synced with the on/off of the car lamp. Orange wire should be connected to the on/off of car lamp


## STEERING WHEEL CONTROL SETUP

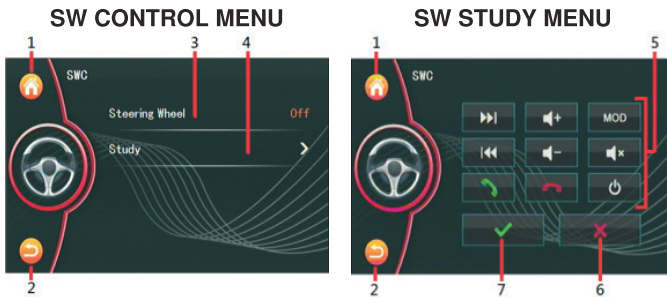

1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. Touch to turn on or off of steering wheel control (when the steering wheel control wires – grey & green as well as the ground wire connected).
4. Touch to activate **SW STUDY MENU** for steering wheel control learning & setting.  
Steps for learning & setting:
  - ~ touch any control key "5" on screen
  - ~ press & hold the respective control of the steering wheel of the car
  - ~ the unit starts learning and once completed, indicator appears on screen
  - ~ follow the above steps to set for all other controls
  - ~ when completed, press "7" to confirm the setting
  - ~ press "6" to cancel the setting
5. These show items available for setting.
6. Touch to cancel the setting.
7. When study & setting completed, touch to confirm the setting.

## VERSION OF UNIT

### VERSION OF UNIT

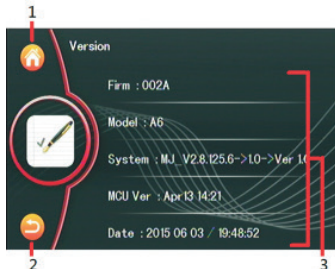

1. Touch to shift screen to **MAIN MENU**.
2. Touch to shift to previous menu or operation mode.
3. These show the software version of unit.

Note: The **VERSION OF UNIT** is used to show the details of unit. This is not available for setting.

## ON SCREEN – RADIO OPERATION

At **MAIN MENU**, touch “**RADIO**” icon to shift screen to **RADIO MENU** for radio operation.



### **RADIO MENU**



1. Touch to start searching the radio frequency & storing the strongest signal stations into memory. After one cycle searched, the unit starts intro broadcasting of the preset memory stations for a few seconds. Touch again to stop this intro broadcasting.
2. Touch repeatedly to fine tune radio frequency upward or downward.
3. Touch to tune the radio frequency to upward or downward station for broadcasting.
4. Touch the desired preset station number (any of 1-20) to start broadcasting of the selected station. Touch & hold shortly the preset station number can store the current broadcasting station (frequency) into that station number.
5. Touch to select stereo (ST) or mono mode at FM radio band.. When stereo signal received, stereo indicator will be appeared on screen and this is no indicator for mono signal.
6. Touch to select local (LOC) setting for reception of strong signal stations and a distant setting for reception of weak stations. When local (LOC) setting is selected, LOC will appear on screen and this is no indication for distant setting.
7. Touch to select stereo (ST) or mono mode at FM radio loud
8. Hold & slide to select the desired radio frequency for broadcasting.
9. Touch to mute the unit.
10. Touch to shift to **BLUETOOTH** mode for operation (available when a mobile phone connected).
11. Touch to turn off the screen. When the screen turned off, touch any portion of the screen to turn on the screen.

**ON SCREEN – DISC / USB / SD CARD INPUT OPERATION**


At **MAIN MENU**, touch “DISC” / “USB” / “CARD” icon on screen to shift to multi-media playback mode and playback will start automatically. Depends on the input device and playback media, touch on screen (at music playback, touch repeatedly on screen) to show various playback menus for operation.

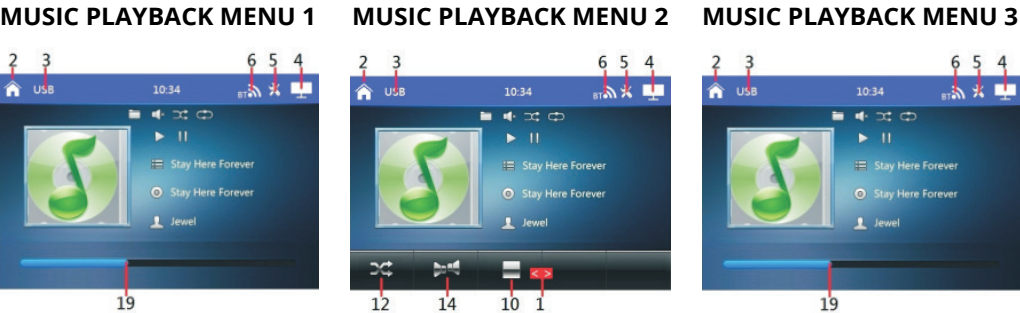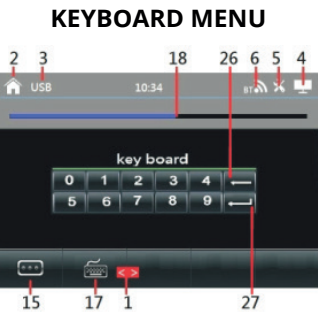


## PHOTO PLAYBACK MENU 1




## PHOTO PLAYBACK MENU 2

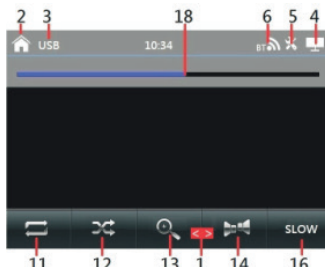

## FOLDER PLAYLIST

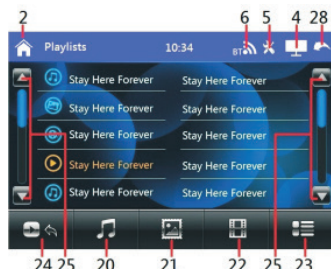

## PLAYLIST

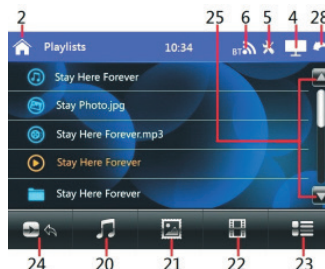

1. Hold & slide to show the hidden operation icons for operation.
2. Touch to shift screen to **MAIN MENU**.
3. This shows the current input device for playback (USB / SD CARD).
4. Touch to turn off the screen. When the screen turned off, touch any portion of the screen to turn on the screen.
5. Touch to activate audio & visual setting for various audio & visual setup (refer to ON SCREEN – AUDIO & VISUAL SETTING for details).
6. Touch to shift to Bluetooth mode for operation (available when a mobile phone connected).
7. Touch to activate **PLAYLIST** / **FOLDER PLAYLIST** (available for input device recorded with folder) to select folder / track for playback.
8. Touch to shift to next or previous track for playback.  
At video playback mode, repeatedly touch & hold shortly to activate various fast forward or fast rewind mode.
9. Touch to start, pause or resume playback.
10. Touch to stop playback temporary and will shift to playlist for playback selection. Touch twice on the selected track for playback or normal playback will resume after a while.
11. Touch repeatedly to select repeat playback mode.
12. Touch to turn on or off of random playback of the input device.
13. Touch repeatedly to zoom in and zoom out of screen for viewing.
14. Touch repeatedly to select the audio output channels that recorded in the playback device.
15. Touch repeatedly to select different sub-titles that recorded in the playback device.  
(Note: Depended on the input device & playback media, this function may not be available)
16. Touch repeatedly to select different speeds of slow motion playback.

17. Touch to activate **KEYBOARD MENU** to input track number directly for playback.
18. At video playback mode, hold & slide to select the position (time) for playback.
19. At music playback mode, hold & slide to select the position (time) for playback.
20. Touch to select music playback at **FOLDER PLAYLIST / PLAYLIST** provided the playback device recorded with music files.
21. Touch to select photo playback at **FOLDER PLAYLIST / PLAYLIST** provided the playback device recorded with photo files.
22. Touch to select video playback at **FOLDER PLAYLIST / PLAYLIST** provided the playback device recorded with video files.
23. Touch to shift to **FOLDER PLAYLIST** or **PLAYLIST** to select desired folder or file for playback. To start playback, touch twice on the selected track.
24. Touch to shift to previous **FOLDER PLAYLIST / PLAYLIST** or beginning of the folder list / playlist.
25. Touch to shift page up or down.
26. Touch to erase the digit input by error.
27. Touch to confirm after input the number of track for playback.
28. Touch to shift back to **PLAYBACK MENU**.

## ON SCREEN – BLUETOOTH OPERATION


At **MAIN MENU** and at other operation modes, touch “BT” icon on screen to shift to **BLUETOOTH** operation.

### LINK UP WITH MOBILE PHONE


To linkup **BLUETOOTH** connection with the mobile phone, take your phone and follow the steps:

- set the mobile phone to **BLUETOOTH** state
- start to search new device
- after searched, new device “CAR-KIT”, “CAR BT” or similar device searched out
- input default code “0000” or “8888” in the mobile phone
- at the same time, **BLUETOOTH** icon & **BT DEVICES MENU** appeared on screen
- connection succeeded and you can start using **BLUETOOTH** function


**BT DEVICE MENU  
(NO CONNECTION)**

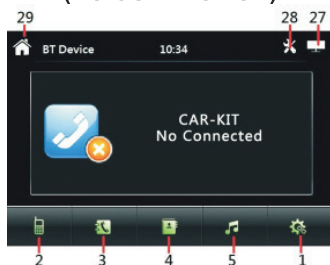


**BT DEVICE MENU  
(CONNECTED)**

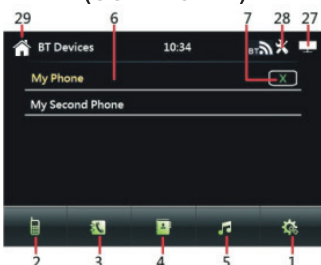


**BT  
DIAL MENU**

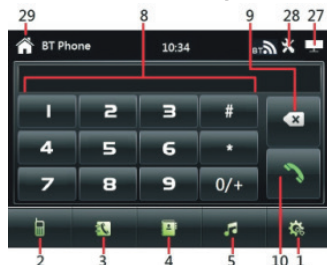


**BT  
INCOMING CALL MENU**

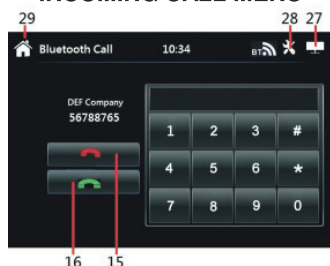


**BT  
CONVERSATION MENU**

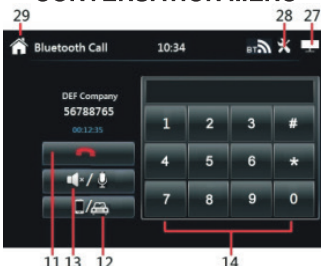


**BT  
RECORD MENU**

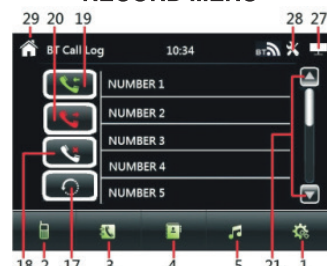


**BT  
PHONE BOOK MENU**

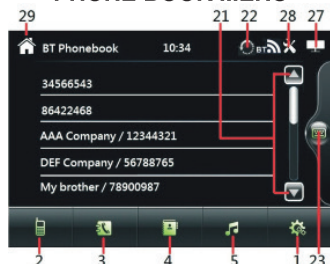

**BT PHONE BOOK  
SEARCH MENU**

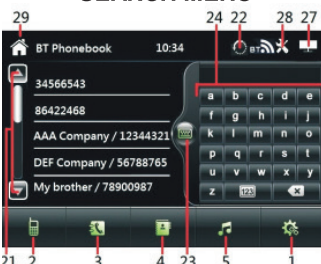

**BT  
MUSIC MENU**

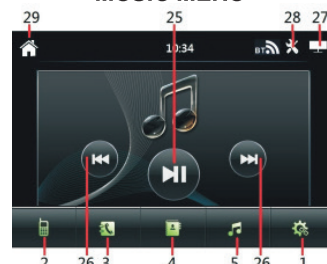

1. Touch to shift to **BT DEVICE MENU** to show the current status on connection.
2. Touch to shift to **BT DIAL MENU** for dial out of phone.
3. Touch to shift to **BT RECORD MENU** to show the record on incoming calls / dial out numbers / missing calls of the connected mobile phone.

4. Touch to shift to **BT PHONE BOOK MENU** to show the phone book of the connected mobile phone.
5. Touch to shift to **BT MUSIC MENU** for transmission of music playback from the connected mobile phone.
6. Touch to select the linked up device.
7. Touch to delete the linked up device.
8. Touch to input the phone number.
9. Touch to erase the digit input by error.
10. Touch to dial out after input the phone number or redial when no phone number input.
11. Touch to hang up or refuse an incoming call.
12. Touch to shift conversation between mobile phone & **BLUETOOTH** of the unit.
13. Touch to turn on or off of sound muting of the microphone.
14. Touch to input digit (for conversation that needs date input).
15. Touch to hang up or refuse an incoming call.
16. Touch to pick up an incoming call.
17. Touch to download incoming calls / dial out numbers / missing calls of the connected mobile phone.
18. Touch to show list of missing calls.
19. Touch to show list of incoming calls.
20. Touch to show list of dial out numbers.
21. Touch to shift page up or down.
22. Touch to download the phone book of the mobile phone to the unit.
23. Touch to activate or close **BT PHONE BOOK SEARCH MENU** to search for the contact person or number.
24. Touch to input details for searching.
25. Touch to start / pause / resume music playback transmitted from the mobile phone.
26. Touch to select upward or downward track for playback.
27. Touch to turn off the screen. When the screen turned off, touch any portion of the screen to turn on the screen.
28. Touch to activate audio & visual setting for various audio & visual setup.
29. Touch to shift screen to **MAIN MENU**.

## **ON SCREEN – AUXILIARY INPUT OPERATION**

At **MAIN MENU**, touch “AV IN” icon on screen to shift to auxiliary input operation (provided an auxiliary video device had been connected). At auxiliary input operation, touch any portion of screen to activate **AUX INPUT MENU** for operation.

### **AUX INPUT MENU**



1. Touch to turn off the screen. When the screen turned off, touch any portion of the screen to turn on the screen.
2. Touch to activate audio & visual setting for various audio & visual setup.
3. Touch to shift to **BLUETOOTH** mode for operation (available when a mobile one connected).
4. Touch to shift screen to **MAIN MENU**.

**SPECIFICATION**

**GENERAL**

|                       |                              |
|-----------------------|------------------------------|
| Power Requirement:    | DC 12 Volts, negative ground |
| Load Impedance:       | 4 Ohms                       |
| Maximum Power Output: | 60 watts x 4 channels        |

**RADIO SECTION**

|                  |                  |          |
|------------------|------------------|----------|
| Frequency Range: | FM Section       |          |
| Area:            | Frequency        | Stepping |
| Europe           | 87.5 – 108 MHz   | 50 KHz   |
| OIRT             | 65 – 74 MHz      | 30 KHz   |
| Australia        | 87.5 – 108 MHz   | 100 KHz  |
| Middle East      | 87.5 – 108 MHz   | 100 KHz  |
| America 1        | 87.5 – 108 MHz   | 50 KHz   |
| America 2        | 87.5 – 107.9 MHz | 100 KHz  |
| America 3        | 87.5 – 107.9 MHz | 100 KHz  |
| America 4        | 87.5 – 108 MHz   | 50 KHz   |
| Japan            | 76 – 90 MHz      | 50 KHz   |
| Brazil           | 87.5 – 108 MHz   | 100 KHz  |
| China            | 87.5 – 108 MHz   | 50 KHz   |
| IF:              | 10.7 MHz         |          |

**DISC SECTION**

|                |                      |
|----------------|----------------------|
| Disc Play      | DVD / VCD / MP3 / CD |
| Mounting Angle | +/- 30°              |

**VIDEO & TV SECTION**

|                        |                    |
|------------------------|--------------------|
| Video & TV System:     | PAL / SECAM / NTSC |
| Video Output Level:    | 1.0Vp-p 75 Ohms    |
| Horizontal Resolution: | 500                |

**BLUETOOTH SECTION**

|                     |          |
|---------------------|----------|
| Communication type: | V2.0     |
| Maximum Distance:   | 5 meters |

**AUDIO SECTION**

|                        |                  |
|------------------------|------------------|
| Maximum Output Level:  | 2 Vrms (+/-3 dB) |
| Frequency Response:    | 20 Hz to 20 KHz  |
| Signal to Noise Ratio: | 85 dB            |
| Channel Separation:    | 80 dB            |

Note: Specification and design; functions and features; unit illumination; colour and display segment are subject to change without prior notice. Photos and drawings on gift box or operation manual might be varied from the exact unit. Depends on the input devices, operation might be varied from the operation manual described.

**COMMON SOLUTION**

The following advices are generally valid and refer to diverse car radios models with the similar characteristics. Please note that some articles may refer not to your model exactly and contain the description of features and functions that your model does not support.

| The description of the problem                 | The cause and the solution                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>The remote control is without function.</b> | <p><i>Solution 1:</i><br/>Please ensure that the battery film is removed. By delivery the battery is protected by a film which should be removed before usage.</p> <p><i>Solution 2:</i><br/>The battery could be empty. Please replace it if required.</p> <p><i>Solution 3:</i><br/>Please make sure that the infrared receiver (labelled with IR) on the control panel is not blocked.</p> <p><i>Note:</i></p> <p>You can test the functionality of the remote control as follows: please hold the IR transmitter towards a camera (e.g. a cell phone camera) and press any button on the remote control. If the remote control is operative you can see the infrared signal on the display of the used camera device.</p> |
| <b>The unit does not turn on.</b>              | <p>This problem is in most cases caused due to a wrong connection of the ISO cable.<br/>Please review the pin assignments of the ISO cable and ISO plug. Pay attention to the proper connection of the ignition- and steady plus and correct the discrepancy if required.</p> <p><i>Note:</i><br/>Though the design of ISO plug is standardized, it's pin assignment is not and may vary. Thus in case of mismatch of connections due to different pin assignments a simple plug'n'play connection may lead to grievous errors.</p>                                                                                                                                                                                           |

|                                                                                                                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|--------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>Poor radio reception:</b><br/>The radio tuner finds no broadcaster or the reception is poor.</p>                                     | <p>For problem-solving regarding the radio reception it is important to know the type of the antenna of your vehicle.</p> <p>Here are the possible solutions for each type of the antenna:</p> <p><b>Type 1 – passive antenna:</b><br/>We recommend you to substitute the existing antenna by the larger and therefore more efficient one.</p> <p>Shark fin or rod antennas (under 5 cm) are definitely insufficient.</p> <p><b>Type 2 – active antenna:</b><br/>The vehicle provides no current for the active antenna. In this case a phantom power is required, which provides the active antenna with the external power supply.</p> <p><b>Type 3 – active antenna with diversity system:</b><br/>The unit provides no current for the active antenna and has no diversity support. For this type of antenna is required the phantom power with an integrated diversity system.</p> <p><i>Note:</i><br/>A phantom power is not to be confused with an antenna amplifier which is far less efficient.</p> |
| <p><b>Radio stations are lost:</b><br/>As soon as the unit will be turned off all the stored stations and users settings will be lost.</p> | <p>This problem is caused due to a wrong connection of the ISO cable.</p> <p>Please interchange the cables for ignition plus and for steady plus.</p> <p><i>Caution:</i><br/>If these wires have fuses the latter should be interchanged as well.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

## REGULATION

### Recycling of an old unit

User information regarding recycling of electric and electronic devices (private households)



WEEE DE19856609

This symbol on products or in their manuals implies that electric and electronic devices at the end of their service life should be separated from the domestic waste.

Please hand these products for recycling at municipal collection points free of charge.

The proper disposal of these products contributes to environment protection. To find the nearest collection point or recycling yard please consult your municipal administration.

### Recycling of the battery

According to the battery decree we make you aware of your obligation to dispose of empty batteries at municipal collection points.

Batteries that contain pollutants (e.g. Hg = mercury, Pb = lead, Cd = cadmium) are labelled with the symbol pictured above.

At our place you can free dispose of the empty batteries purchased at our store.