 


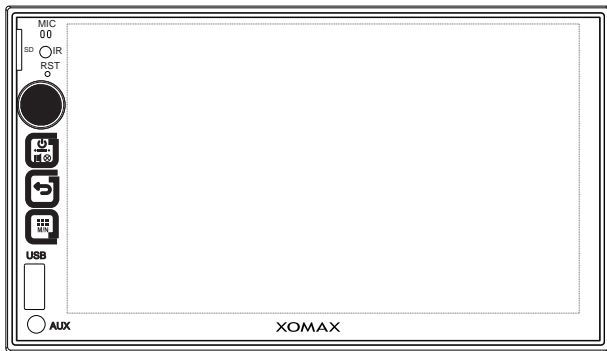

USERS ' MANUAL


**Please read this users' manual
carefully before operation!**



For touch panel model:

 :Press it to power on or power off.

 :Press it to turn back to the last page.

 :to adjust the voice increase or decrease.

RES:Reset button.When any function display abnormal,you could press it for reset the unit.

CARD: Micro SD card slot

AUX :AUX IN.

USB :USB playing.

MAIN MENU



RADIO

Click Radio on the main menu, as shown,



Bands conversion button ,click the button to convert among from FM1/FM2/FM3 circularly.



Mute



Click it to scan and storage the channels from the weakest to the strongest.
When there's a channel is searched, it will play for 6 seconds, then keep going to search the next channel.



Click it to scan and storage the channels from the weakest to the strongest



Audio stereo.(Available for FM only.)

USB SD

Click USB on the main menu, as shown,




Songs Playing



Video Playing



Picture Playing

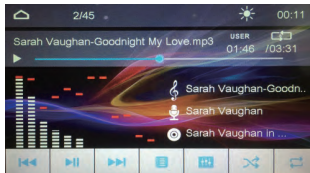

Click it to select the last song.



Click it to pause or resume.



Click it to select the next song.



Click it to the play list.



Click it to enter the EQ setting (ROCK/CLASSIC/JAZZ/FLAT/USER/POP)




Click it to Random play.




Click it to Repeat play.

BLUETOOTH

Click BT on the main menu, as shown,
Bluetooth system:Using a mobile phone to search for Bluetooth device,connect with the mobile phone.It will be prompt after connect successful.After connected,when the phone calling,Bluetooth system would automatically covert to the bluetooth hands free interface.Click  start to conversation.

Notes: When ACC off , and turn on again.It need about 30 seconds to automatically connected.

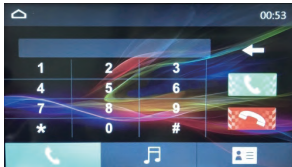

Click it to make a call.




Click it to Bluetooth Music.




Click it to Phone Book.

Click Music icon on BT mode, as shown

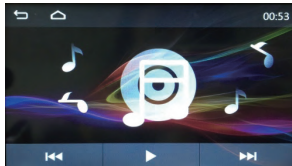


Click Phone Book icon on BT mode, as shown

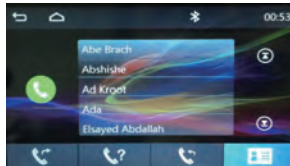

Set up

Click Set up on the main menu, as shown

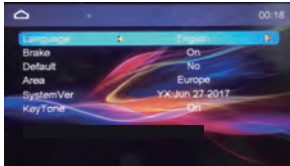

Language setting: Including Turkish, English, Chinese, German and so on.

Brake: When driving a car, for video brake on/off.

Default: No/Yes

Area: Frequency area setting, such as European, Asia, USA and so on.

System version

Key Tone: On/Off

Touch Adjust: Touch calibration


AV IN

Click AV IN on the main menu, as shown




Audio

Click Audio on the main menu, as shown,

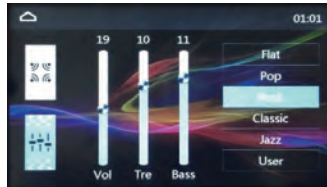


Contrast

Click contrast on the main menu, as shown,

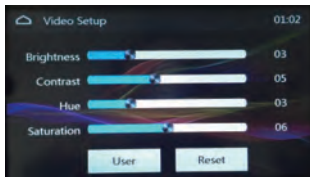


SWC

Click SWC on the main menu, as shown,

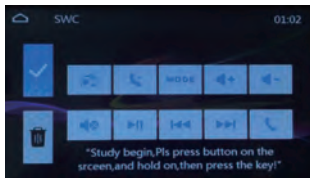

Time

Click Time on the main menu, as shown

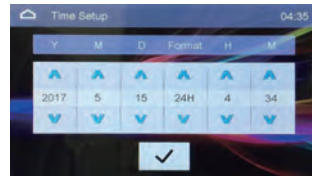

Skin (Wall paper)

Click Skin on the main menu, as shown



Simple Troubleshooting Guide


Problem	Cause and resolve
Power off	1.Check the power fuse is burn out or not, change it. 2.Fail in connection of DC wires, connect them again.
Fail in keying	Program disorder, press reset button or turn off the power to restart.
Fail in getting stations	Check if the antenna has been inputted, or it is not connected correctly, if it is, please input the antenna or connect it correctly.
Bad station receiving effect	1.Antenna length may not be set up right, check if it reach out completely or is broken down, if it broke down, please change it for new one. 2.Or the radio signal is too week. 3.Antenna is not grounding rightly, please confirm if it connects the ground wire rightly.
Bad ESP effect	1.There is dust on lens, please find professionals to clean the lens. 2.Lens is aged, please change it.
Fail to input disc	Loader is with disc
“STEREO”flashing	1.tuning the radio frequency accurately. 2.Radio signal is too week.(please press ST button to turn off stereo.
Noise, image jump-ing,no color	1.disc is damaged or blurry. 2.Color system setup is not correct, set the color system for “PAL” or “NTSC” according to the connected TV condition
Remote unavailable	1.The battery of remote control has no power, change the battery. 2.The remote control window can't receive signal, made the remote control aim at model's remote receiver window.
SD/USB no reading	1.not connected correctly. 2.belongs to unsupported card, only supports 2G card at present.

Accessories

The machines provide the following accessories:

	NO	Details
●	1	Instructions
●	2	Remote
●	3	Power tails

Wire diagram

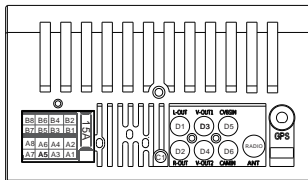

A1	GND	A5	Power B+	B1	R L Speaker-	B5	F R Speaker-	C1	AUX Audio Input	D4	Video Output 2
A2	ACC	A6	Steering wheel	B2	R L Speaker+	B6	F R Speaker+	D1	RCA L Audio Input	D5	Video Input
A3	Illuminate Control	A7	Back up Camera	B3	F L Speaker-	B7	R R Speaker-	D2	RCA R Audio Input	D6	Backing Video Input
A4	ANT	A8	Hand braking	B4	F L Speaker+	B8	R R Speaker+	D3	Video Output 1		

Declaration

The manual would be comprehensive and accurate based on the existed information. But company reserves the right of manual modification. Which will not notify specially.